



GT LIVE 2009 to 2010 Update Instructions

BE ADVISED: THIS UPDATE WORKS ON GT LIVE 2009 VERSIONS ONLY.

If you have an older version of Golden Tee LIVE call 800.262.0323 x106.

UPDATE CONTENTS:

- Update Memory Stick labeled Golden Tee LIVE 2010 **Version 5.00.XX**
- New 2010 Cabinet Marquee

Part 1: Install Memory Stick

Please remember it is important to **KEEP** the memory stick for future updates.
DO NOT DISCARD.

There are three methods for updating your game:

- Method 1 is performed from the back of the dedicated cabinet.
- Method 2 is performed from under the control panel (adapter required) of the dedicated cabinet.
- Method 3 is performed on Showpiece models.

Select one method and follow the instructions below:

Method 1: Update from Back (Dedicated Cabinet)

1. Complete a collection on the machine.
2. Turn OFF all power to the machine.
3. Remove the back door to the cabinet.
4. Locate an open USB port on the system box. If there are no open ports, unplug the USB cable that is routed to the control panel.

WARNING: Do Not Unplug the USB cables from the I/O Board or CID.

5. Insert the Update Memory Stick into the now open USB port.
6. Continue with Part 2 on reverse side to complete the update.

Method 2: Update from Under Control Panel (Dedicated Cabinet)

Note: Method 2 requires a USB A-B Female-Female Adapter (not included).

Adapters can be purchased from Startech.com, CDW, CompUSA, Buy.com and other electronic outlets. Refer to Startech.com ID number GCUSBABFF when ordering. (Adapter pictured at right)



1. Complete a collection on the machine.
2. Turn OFF all power to the machine.
3. Remove the security screws on the side of the control panel box and lift up the hinged control panel.
4. Locate the open USB cable that is routed to the system box.
5. Insert a USB A-B Female-Female Adapter into the cable end, and the memory stick into the opposite side of the adapter.
6. Continue with Part 2 on page 2 to complete the update.



Method 3: Update from Under Control Panel (Showpiece Cabinet)

1. Complete a collection on the machine.
2. Turn OFF all power to the machine.
3. Turn the key at the back of the Showpiece cabinet to unlock the control panel box and lift up the hinged control panel.
4. Locate the open USB port on the back of the system box.
5. Insert the memory stick into the port.
6. Continue with Part 2 to complete the update.

PART 2: Perform Software Update

1. Turn ON power to game. **It is important to prevent losing power or turning off the game during this software update!**
2. The game should automatically detect the memory stick and run the Installer program.

WARNING: If Error Message 6 or 12 displays, the wrong USB cable was disconnected.
Turn OFF power, replace the cable, select a different USB port and try again.
If the initial update speed is not ideal, more than one reboot may occur.

3. The Installer will read the CID, I/O board, and Nighthawk chassis to make sure this upgrade is possible.
4. Press Start to connect to ITNet for authorization.
5. Press Start again to accept the ITNet Operator's Agreement (the installation of the software upgrade will begin). The upgrade will take about 20-30 minutes to complete. Please be patient during this process.

Important! Do not lose power or turn off the game after the start button has been pressed or any time while the update is in progress.

6. When the install is complete, the Installer prompts to turn OFF the game, remove the memory stick, reconnect the original USB cable, and then turn the game back ON.
7. Once complete, enter the System Setup menus and verify that the software version is **Version 5.00.XX**.



Dedicated Marquee Installation

1. With the power OFF to the cabinet, carefully unscrew and remove the back panel of the marquee.
2. Once the back panel is removed, disconnect the light from the attaching cables so it is safe to remove the back panel and the old marquee art.
3. Clean the glass on both sides to give players a clear view of the new marquee.
4. Remove the tabs to expose the adhesive on the new marquee. Carefully line up the marquee with the inside of the glass, making sure that all the printed images are visible, and gently press into place.
5. Reconnect the cables to the marquee light and secure the back panel. Be sure the light behind the marquee works.

Note: Marquee installation will be different for cabinets that were not manufactured by Incredible Technologies. Consult your manual.

Showpiece Marquee Installation

1. Slide the rectangular marquee mounting frame from its position on the two upright posts.
2. Remove any one of the four side pieces of the mounting frame.
3. Remove the current plastic laminate marquee from the mounting frame, but do not remove the cardboard.
4. Slide the updated marquee into place and reassemble the side piece or pieces. Make sure all of the surrounding pieces of the mounting frame are tight and the plastic laminate is smooth against the cardboard.
5. Slide the fully assembled marquee back into position.

System Box Filter Cleaning

A clean filter is very important for proper cooling and optimal performance of the hardware. Be sure to clean this filter regularly.

1. With the back door removed, slide out the ventilation filter located on the underside of the system box.
2. Clean the filter thoroughly so it is free of dust and debris.
3. Insert the filter back into the slots of the bracket located on the underside of the system box.